

# Instructions for Replacing 1<sup>st</sup> Generation SmartNav / NavPlus with a DEA5XX radio

1. Remove existing head unit using radio removal tools.
2. Remove rubber bullet from the back of the existing head unit and install it onto the new DEA5XX radio.
3. Disconnect harnesses from the existing display. The display can either be removed or left in the dash to fill the hole. **The display will not be functional.**
4. Remove existing AM/FM antenna adaptor (white connector) from antenna cable.
5. Disconnect existing head unit adaptor and audio harness from IP harness and remove, replace with new one.
6. **IF** installing a Bluetooth radio, install PP604240 microphone (sold separately) on A-Pillar as shown on next page and route the blue connector to the radio area.
7. Connect black 16-position ISO-DIN “J543 RADIO” connector from new audio harness directly into radio.
  - a. **IF** the truck is equipped with premium audio, connect the yellow “J544 RADIO 2” connector to the radio.
8. Connect the existing AM/FM antenna cable, existing Satellite Radio antenna cable (if applicable to new radio), and new microphone cable (if applicable) to the radio, then install the radio into the dash. Ignore the existing GPS antenna connection.
9. Reassemble the dash panels.

## Radio Retrofit: Verification

After installation is complete, verify operation of the following items:

1. AM/FM/WB radio: verify reception
2. SXM Satellite radio: verify reception

**PP607144-003**


# Radio Retrofit: Microphone Installation

1. Remove the A-Pillar trim.
2. Clean the top of the A-Pillar trim using a 50/50 mix of isopropyl alcohol and water.
3. Install microphone on A-Pillar trim using adhesive tape on mic. Orient the microphone as shown in the picture below.
4. Route mic cable over top of A-Pillar trim, behind trim and down into IP.
5. Reinstall the A-Pillar trim.

Microphone



Microphone (installed)

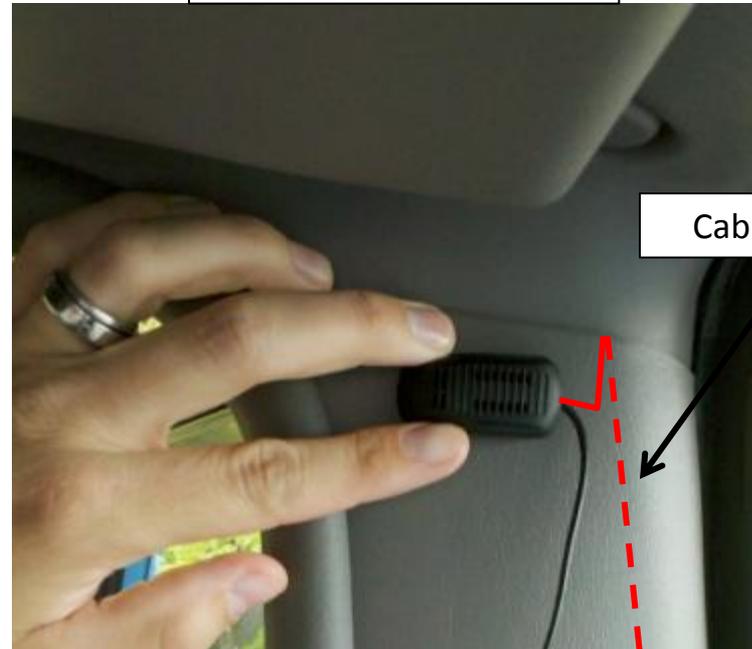

Cable Routing